



STARTING AND IGNITION

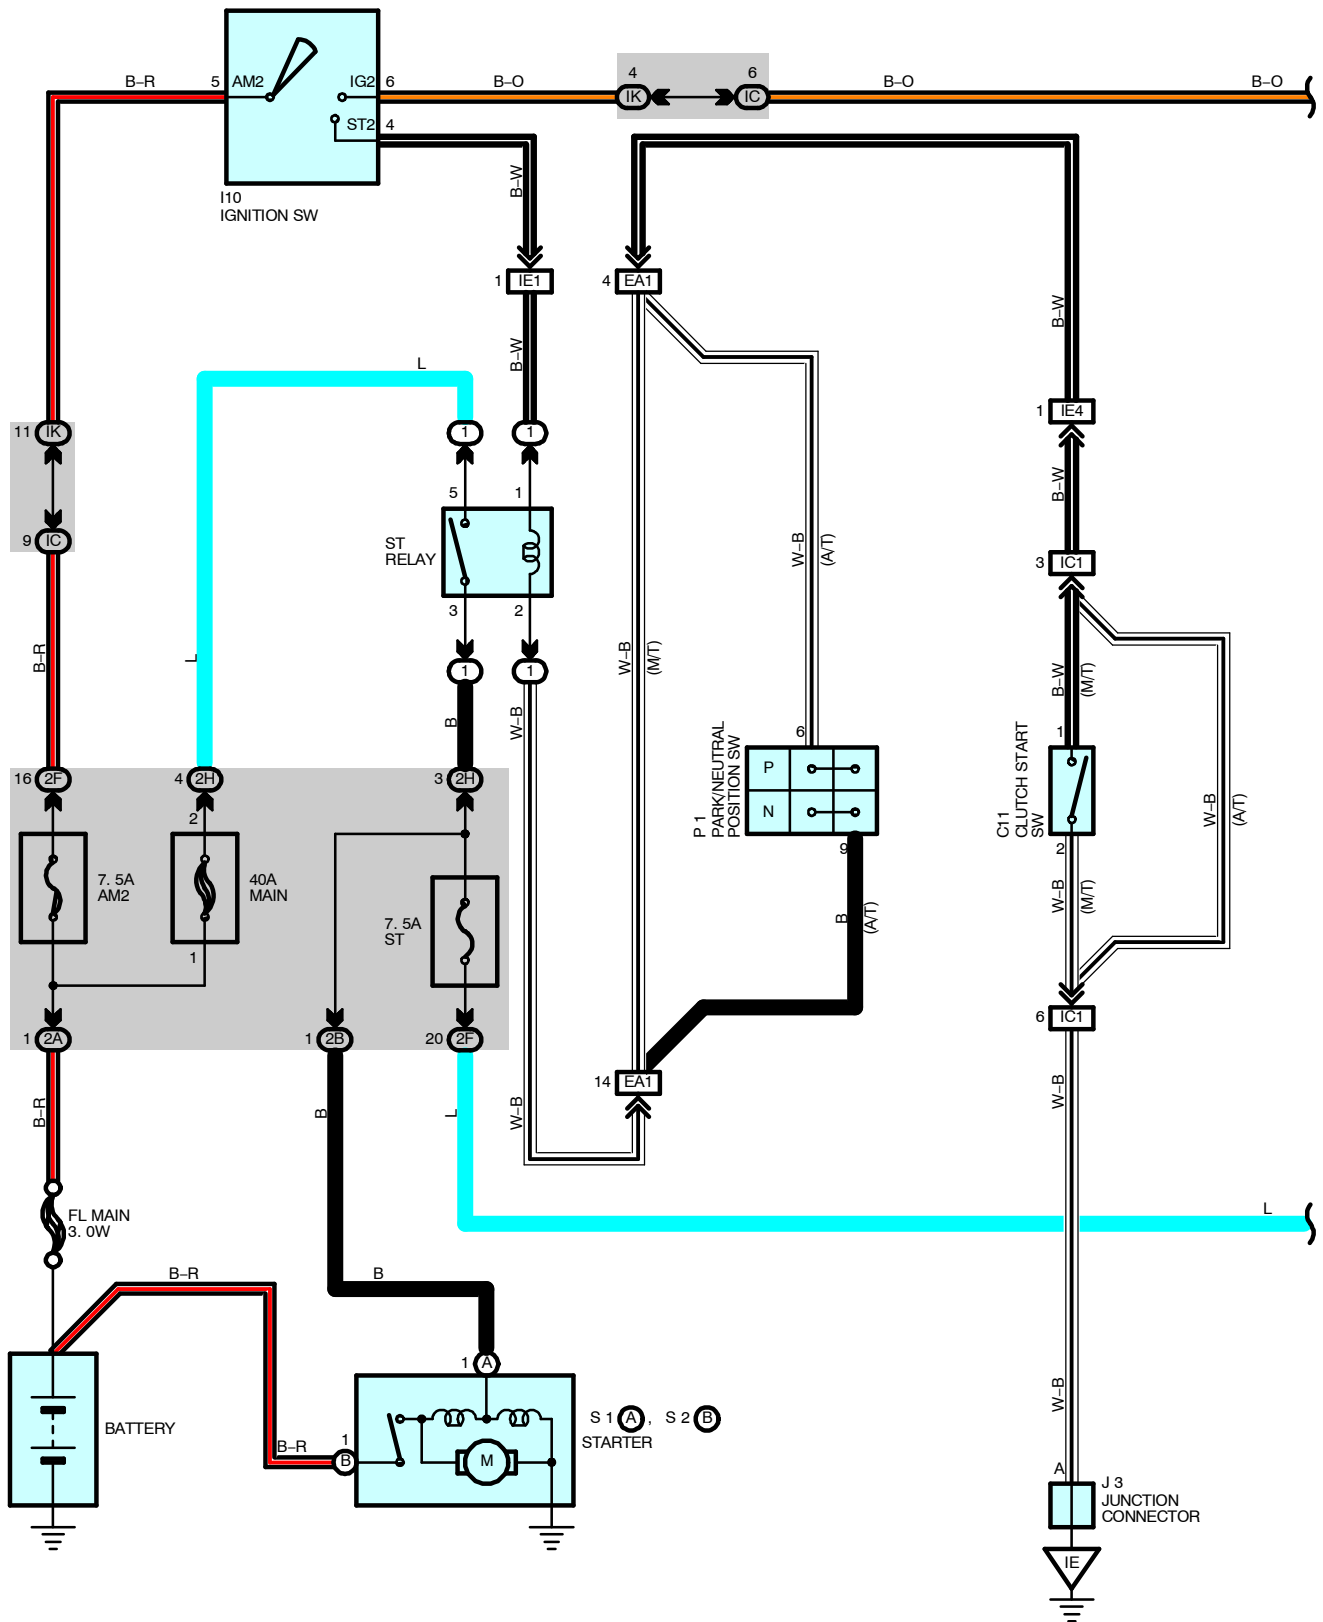

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

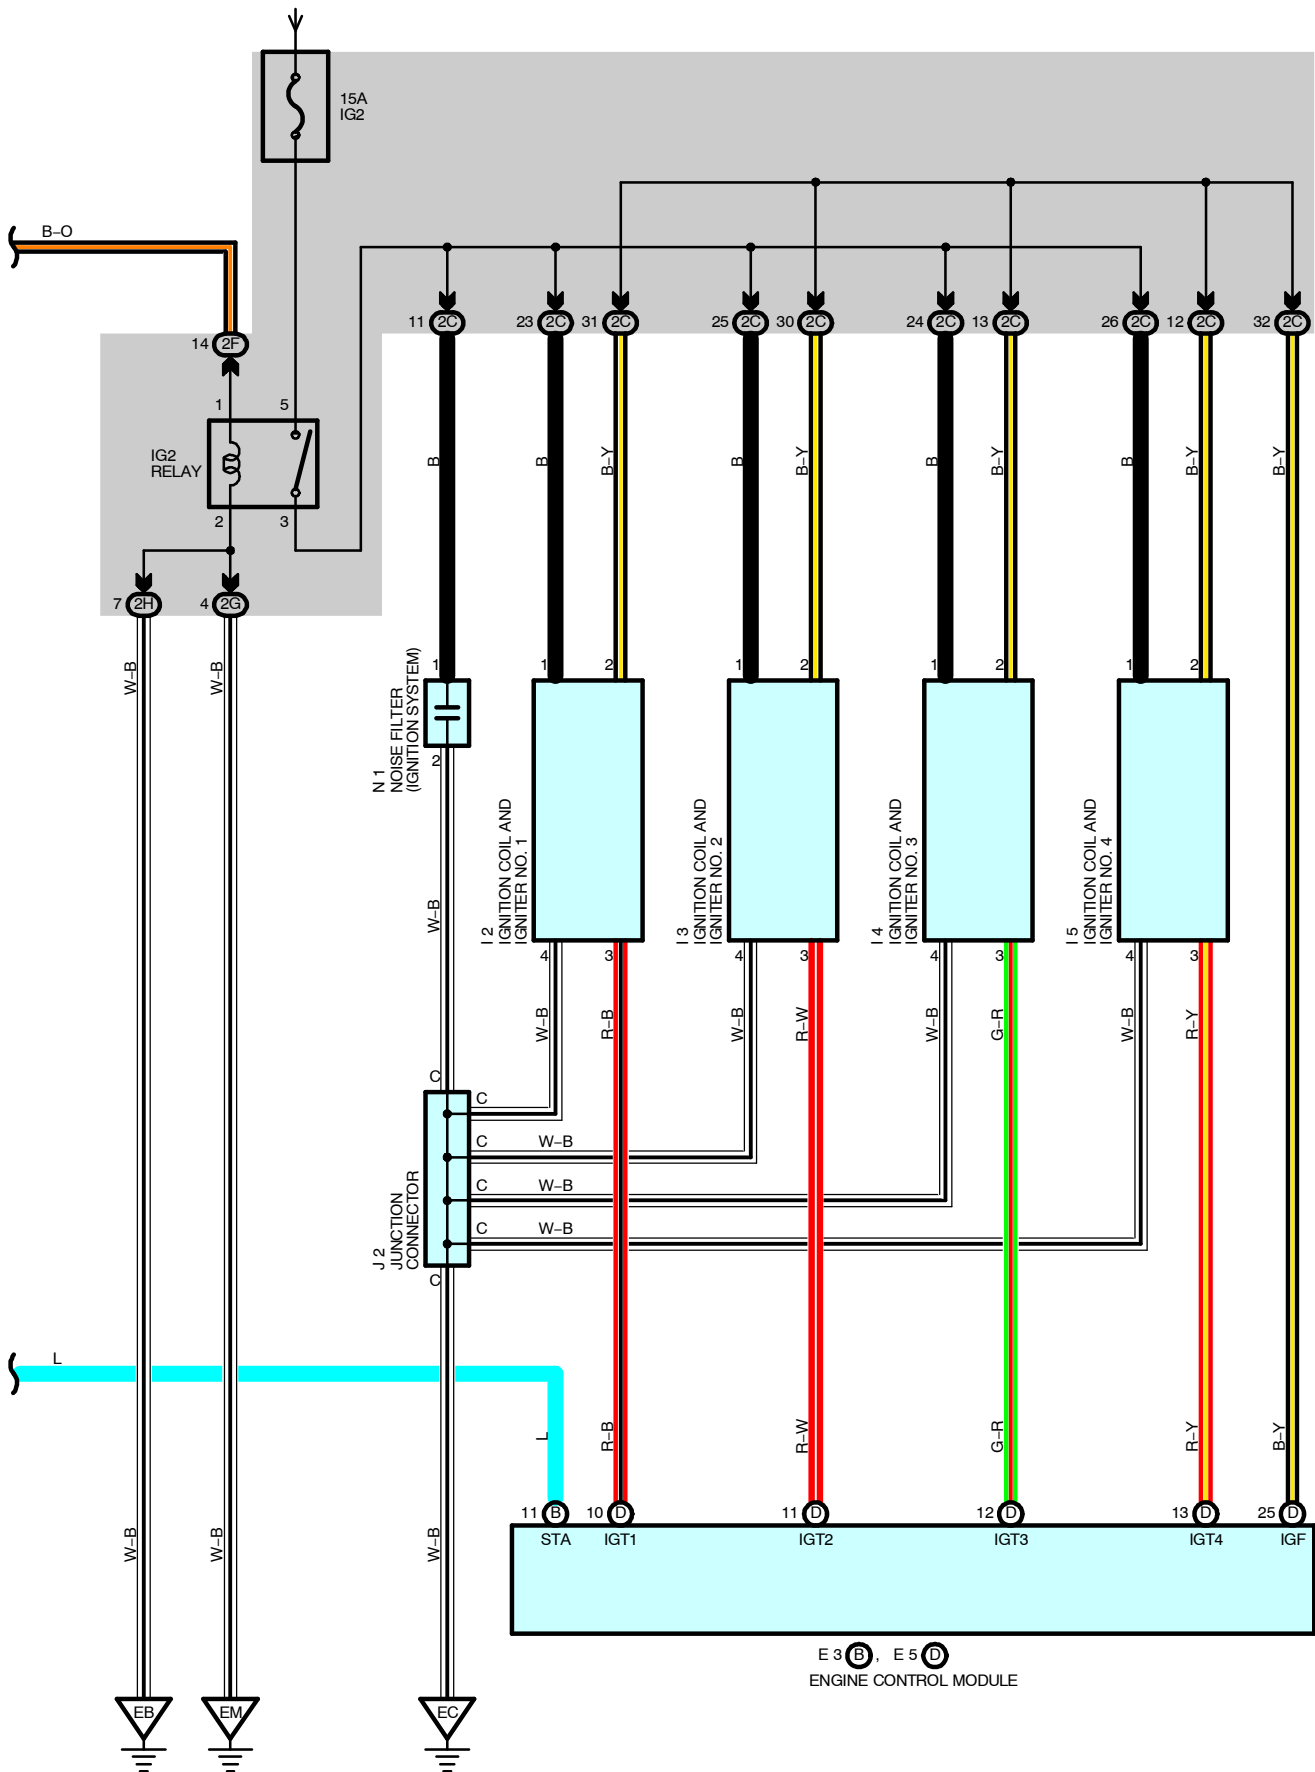

STARTING AND IGNITION

SERVICE HINTS

I10 IGNITION SW

5-6 : Closed with the ignition SW at **ON** or **ST** position

5-4 : Closed with the ignition SW at **ST** position

C11 CLUTCH START SW (M/T)

1-2 : Closed with the clutch pedal fully depressed

ST RELAY

5-3 : Closed with the clutch start SW on (M/T), Park/Neutral position SW on (A/T) and the ignition SW at **ST** position

S1 (A), S2 (B) STARTER

Points closed with the clutch start SW on and the ignition SW at **ST** position (M/T)

Points closed with the Park/Neutral position SW at **P** or **N** position and the ignition SW at **ST** position (A/T)

P1 PARK/NEUTRAL POSITION SW (A/T)

6-9 : Closed with the A/T shift lever at **P** or **N** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C11	36	I4	33 (1ZZ-FE) 35 (2ZZ-GE)	N1	35 (2ZZ-GE)
E3	B			P1	33 (1ZZ-FE) 35 (2ZZ-GE)
E5	D	I5	33 (1ZZ-FE) 35 (2ZZ-GE)	S1	A
		I10	37		33 (1ZZ-FE) 35 (2ZZ-GE)
I2		J2	33 (1ZZ-FE) 35 (2ZZ-GE)	S2	B
					33 (1ZZ-FE) 35 (2ZZ-GE)
I3		J3	37		
		N1	33 (1ZZ-FE)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	26	Engine Room R/B No.1 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IK	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40 (1ZZ-FE) 42 (2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
IC1	44	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Reinforcement LH)
IE1	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE4		

**: GROUND POINTS**

Code	See Page	Ground Points Location
EB	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
EC	40 (1ZZ-FE)	Cylinder Head Cover LH
	42 (2ZZ-GE)	
EM	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
IE	44	Cowl Side Panel LH