





ENGINE CONTROL

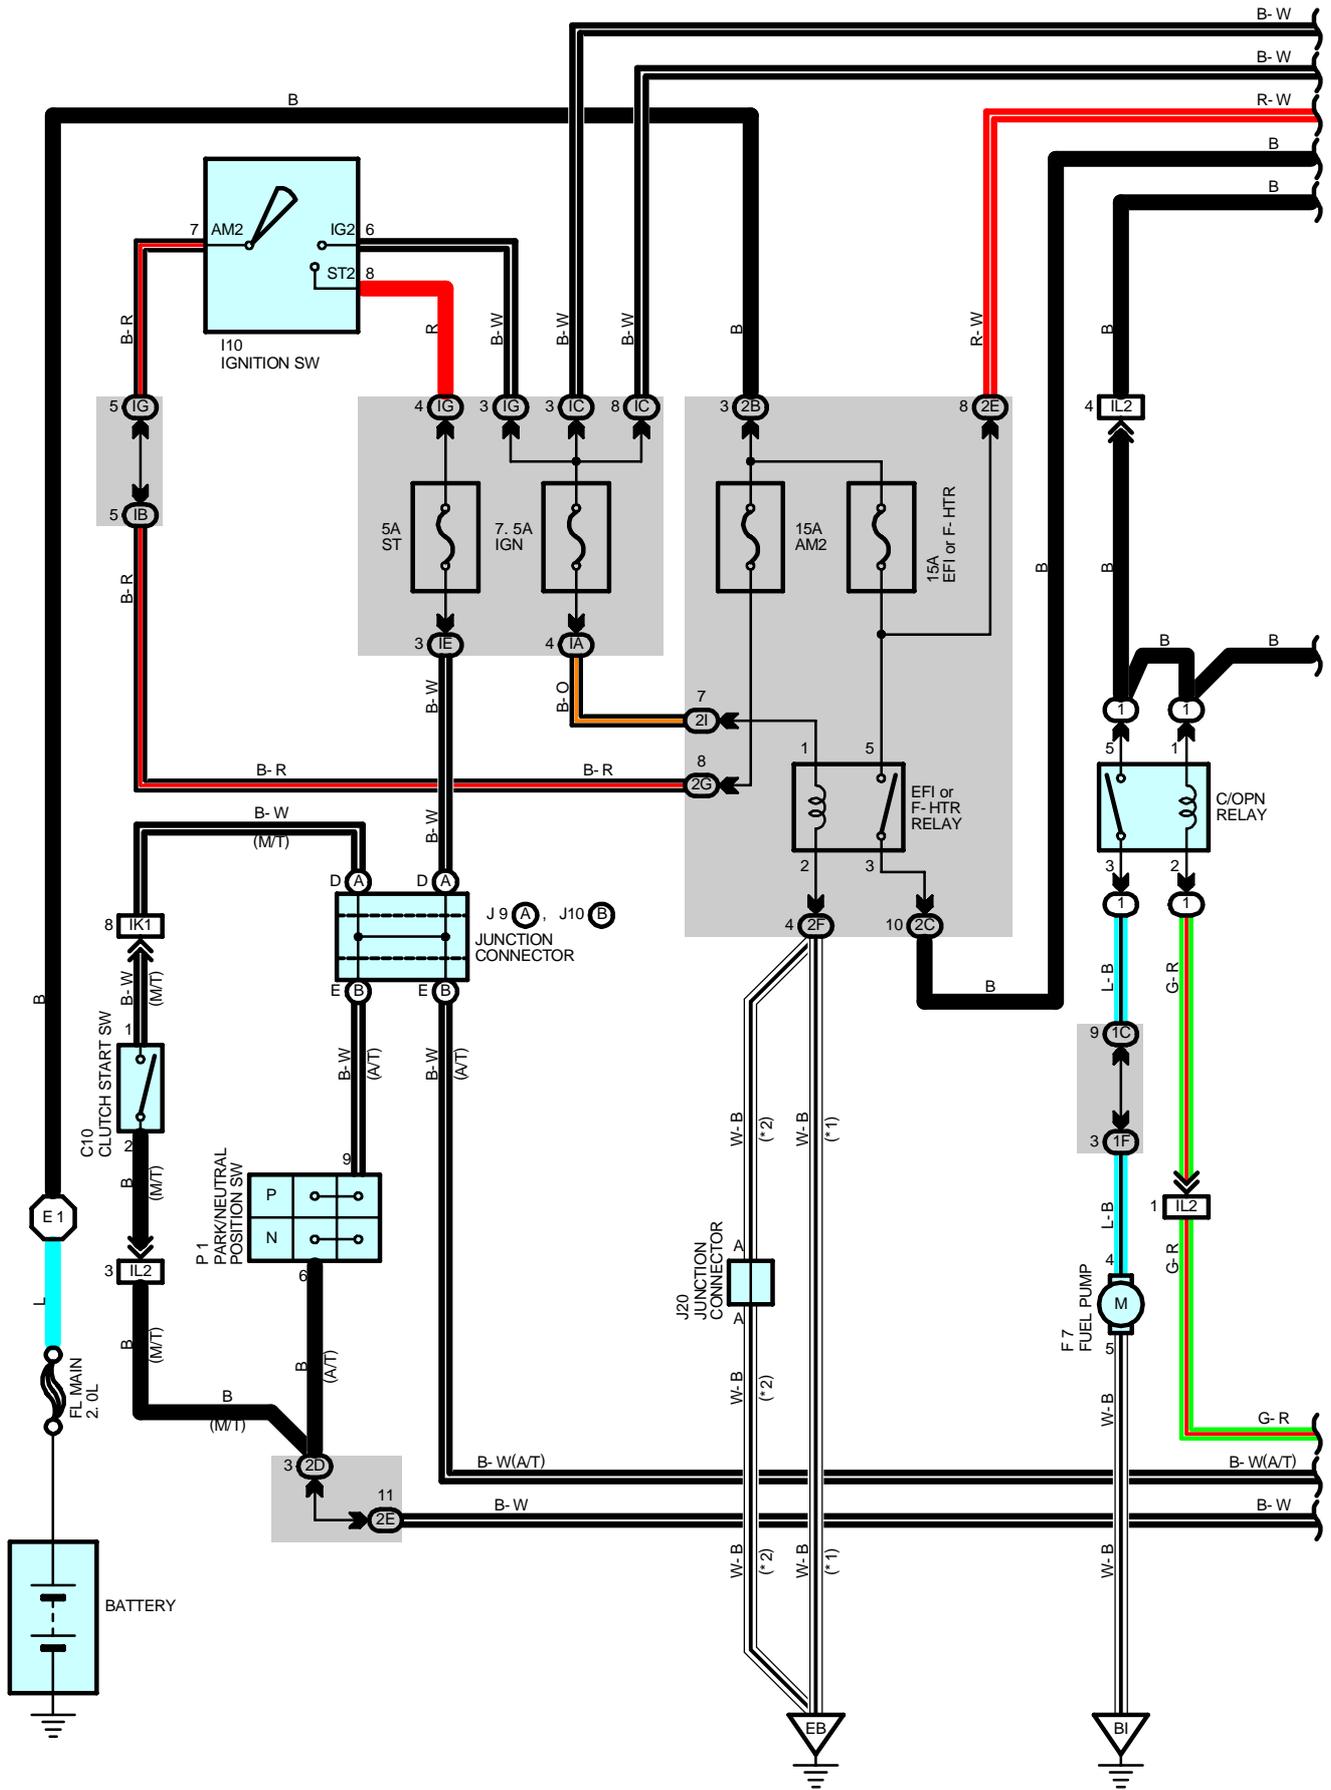

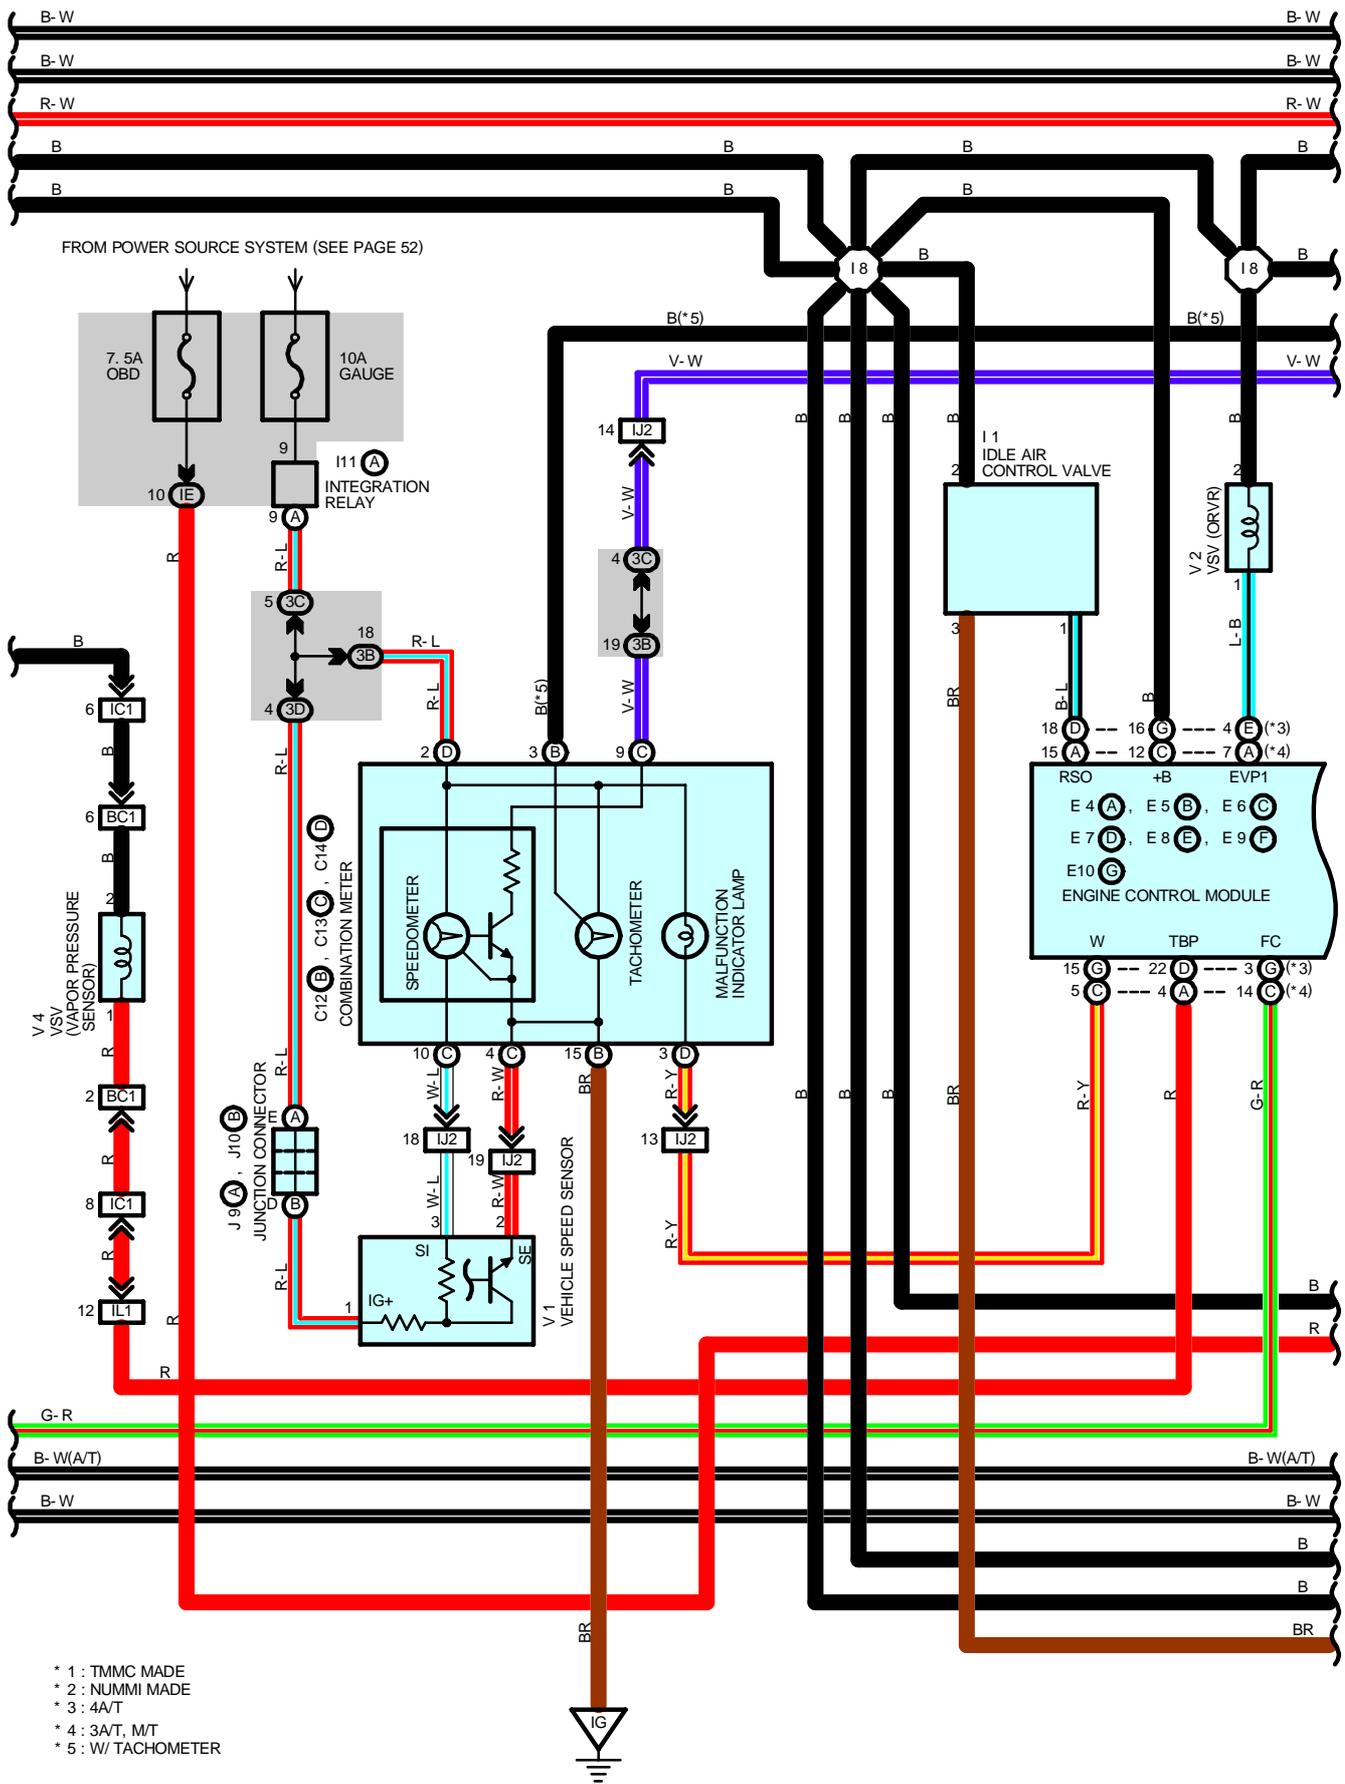


ENGINE CONTROL

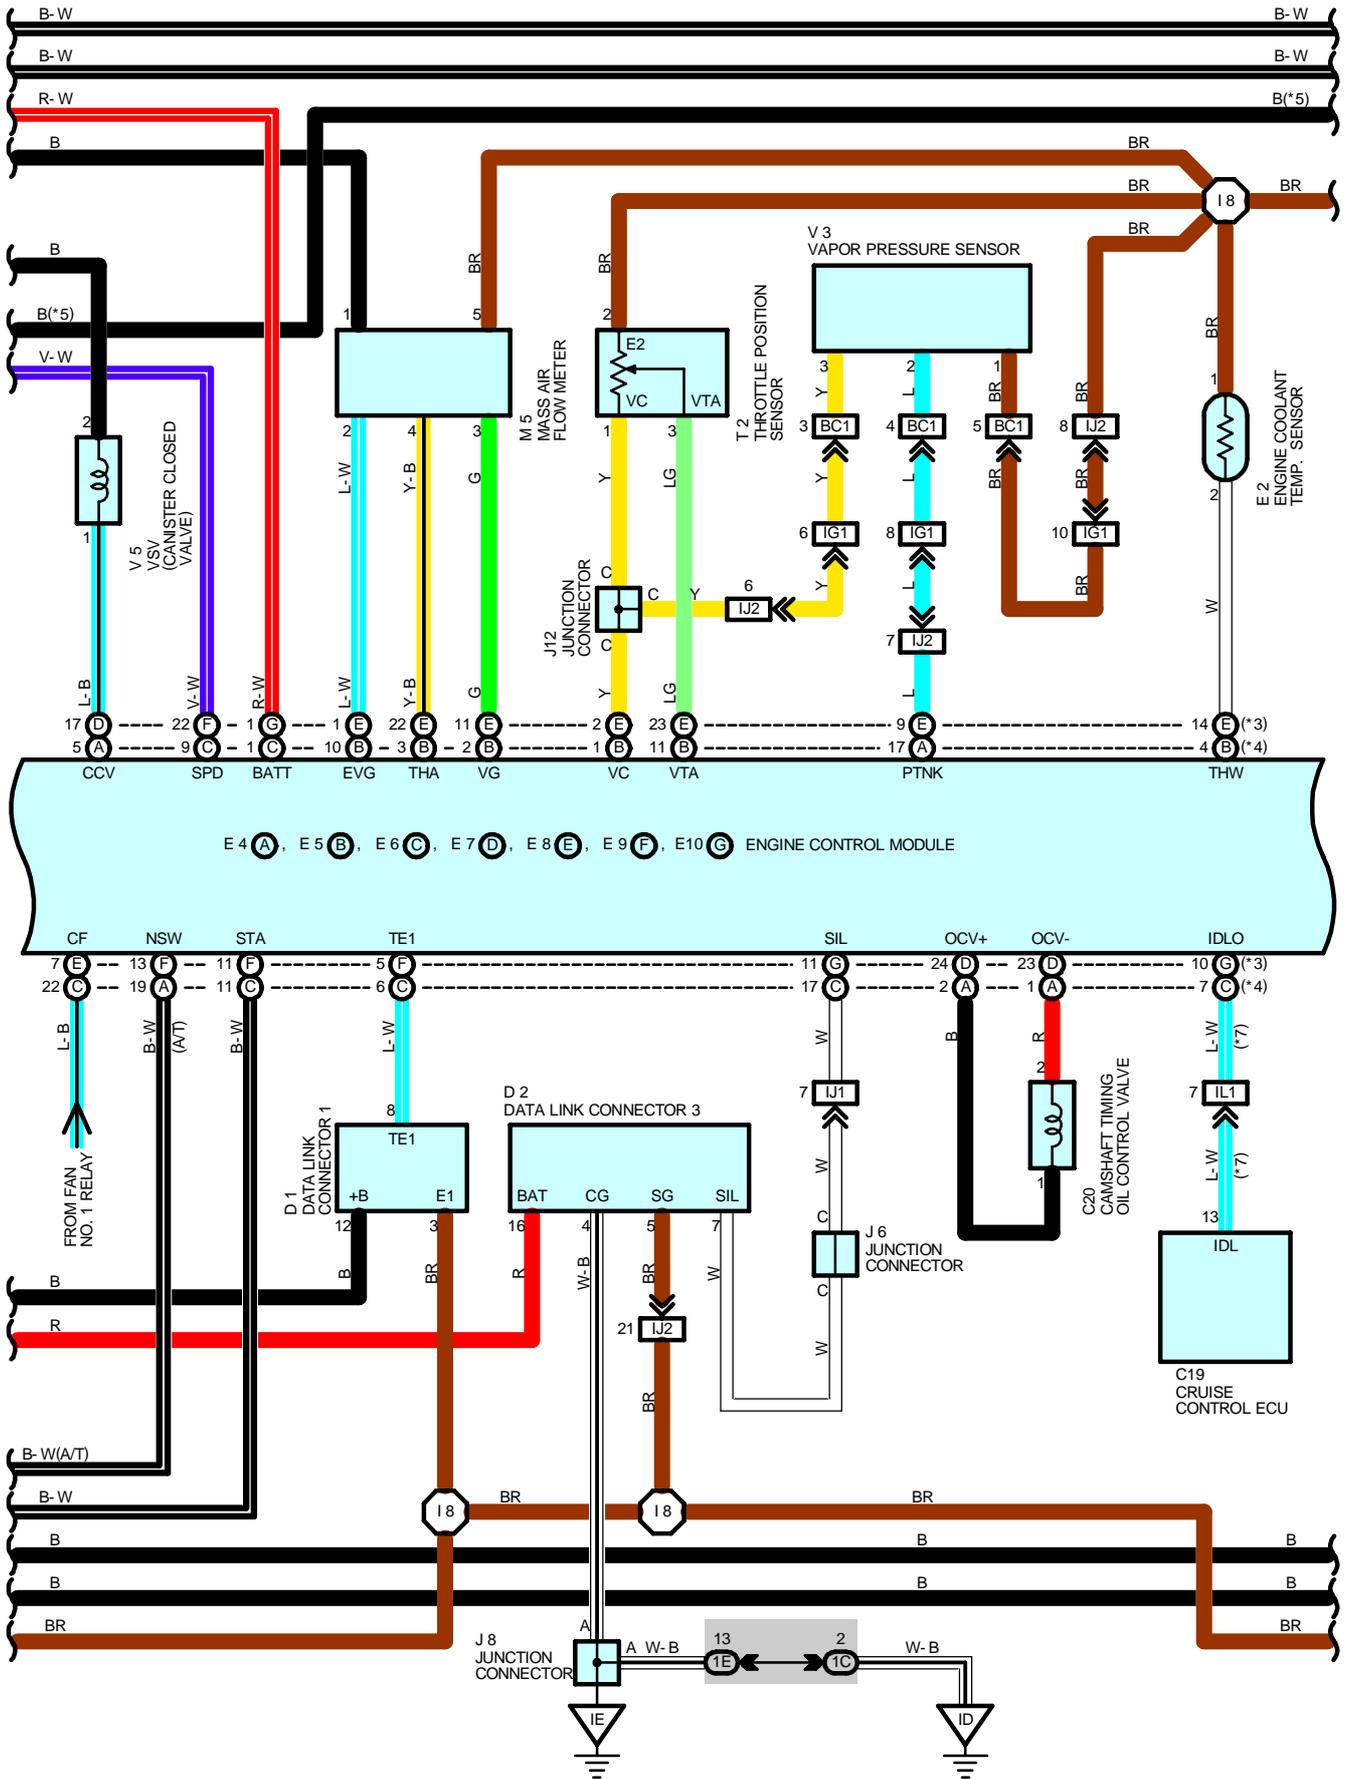

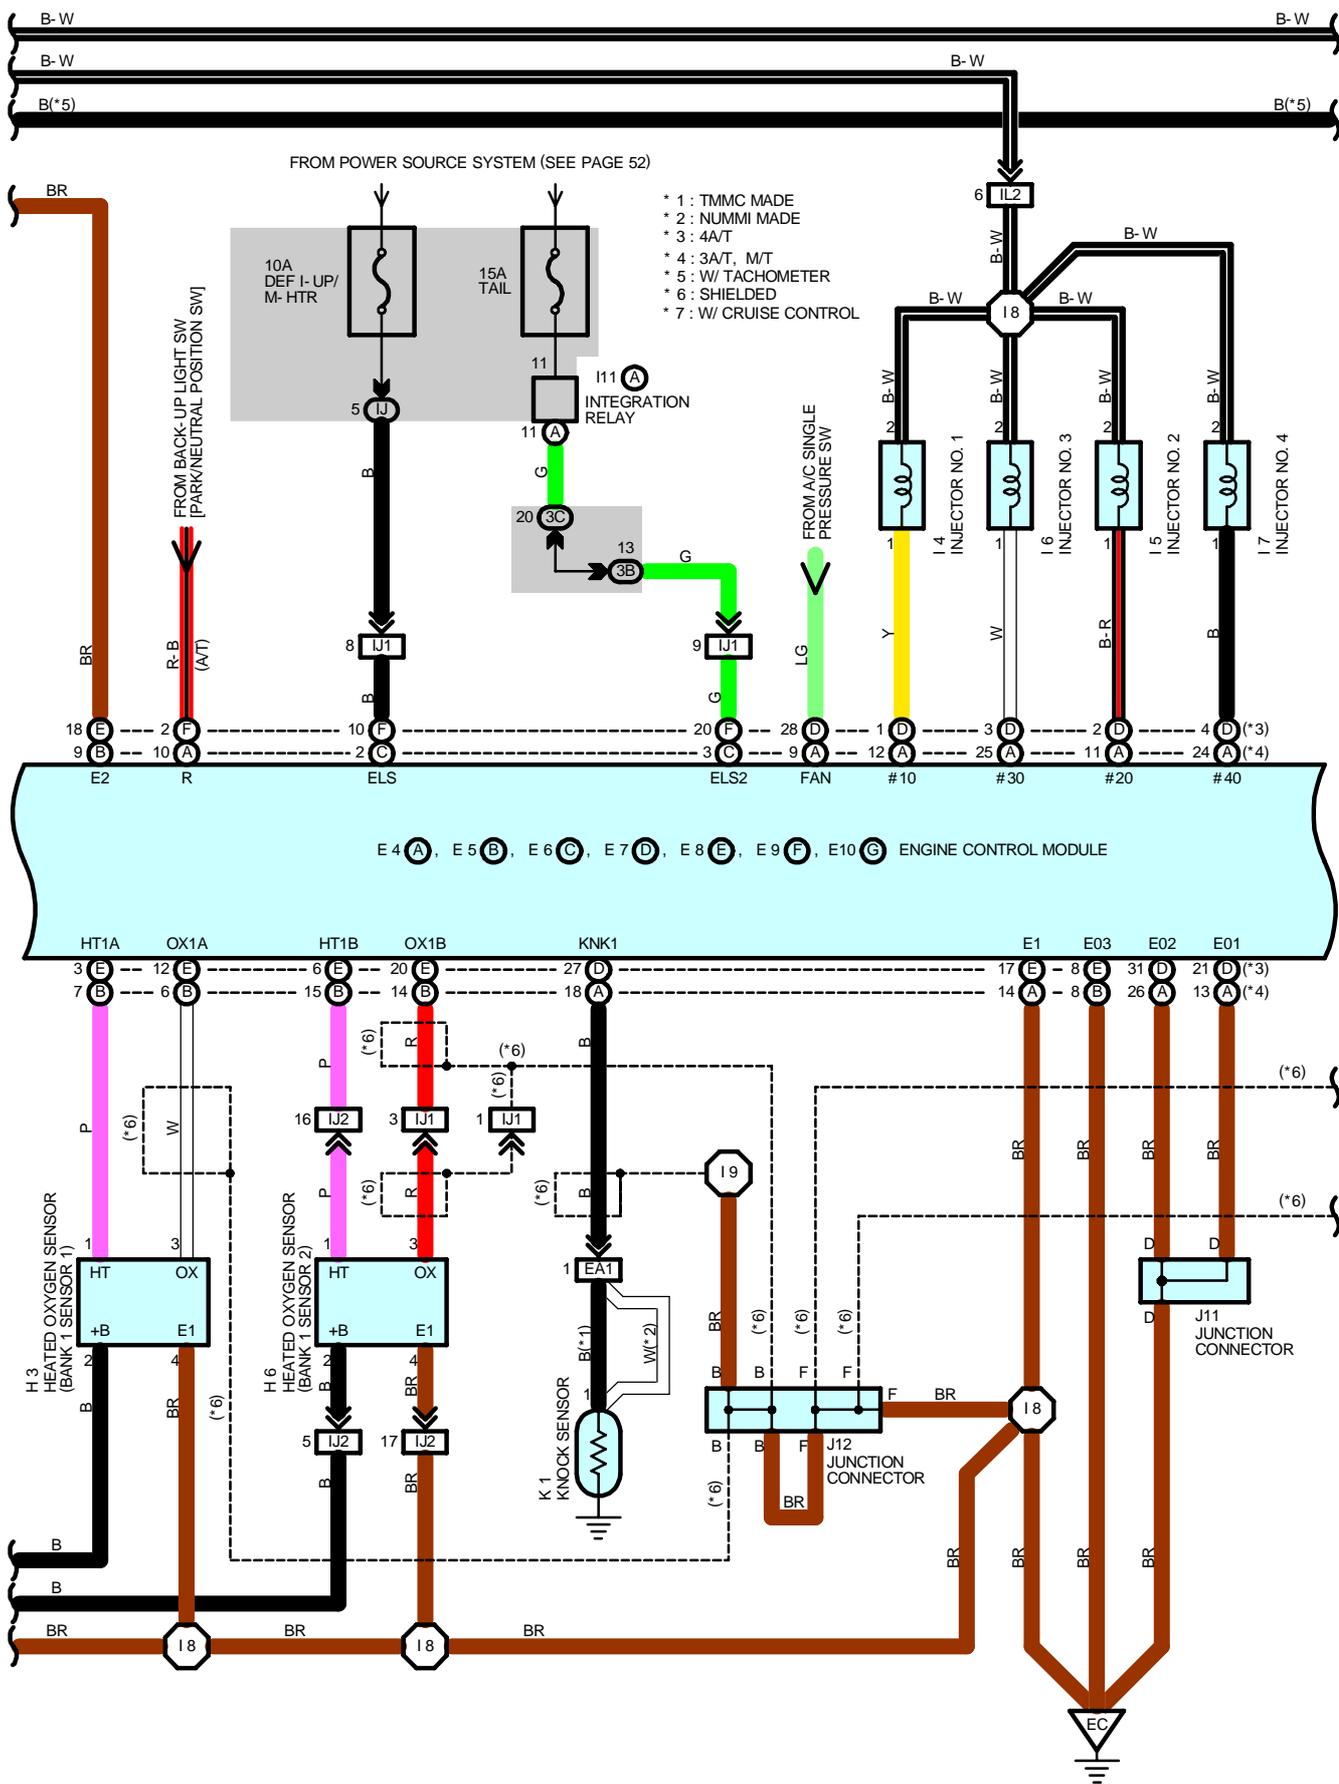

ENGINE CONTROL

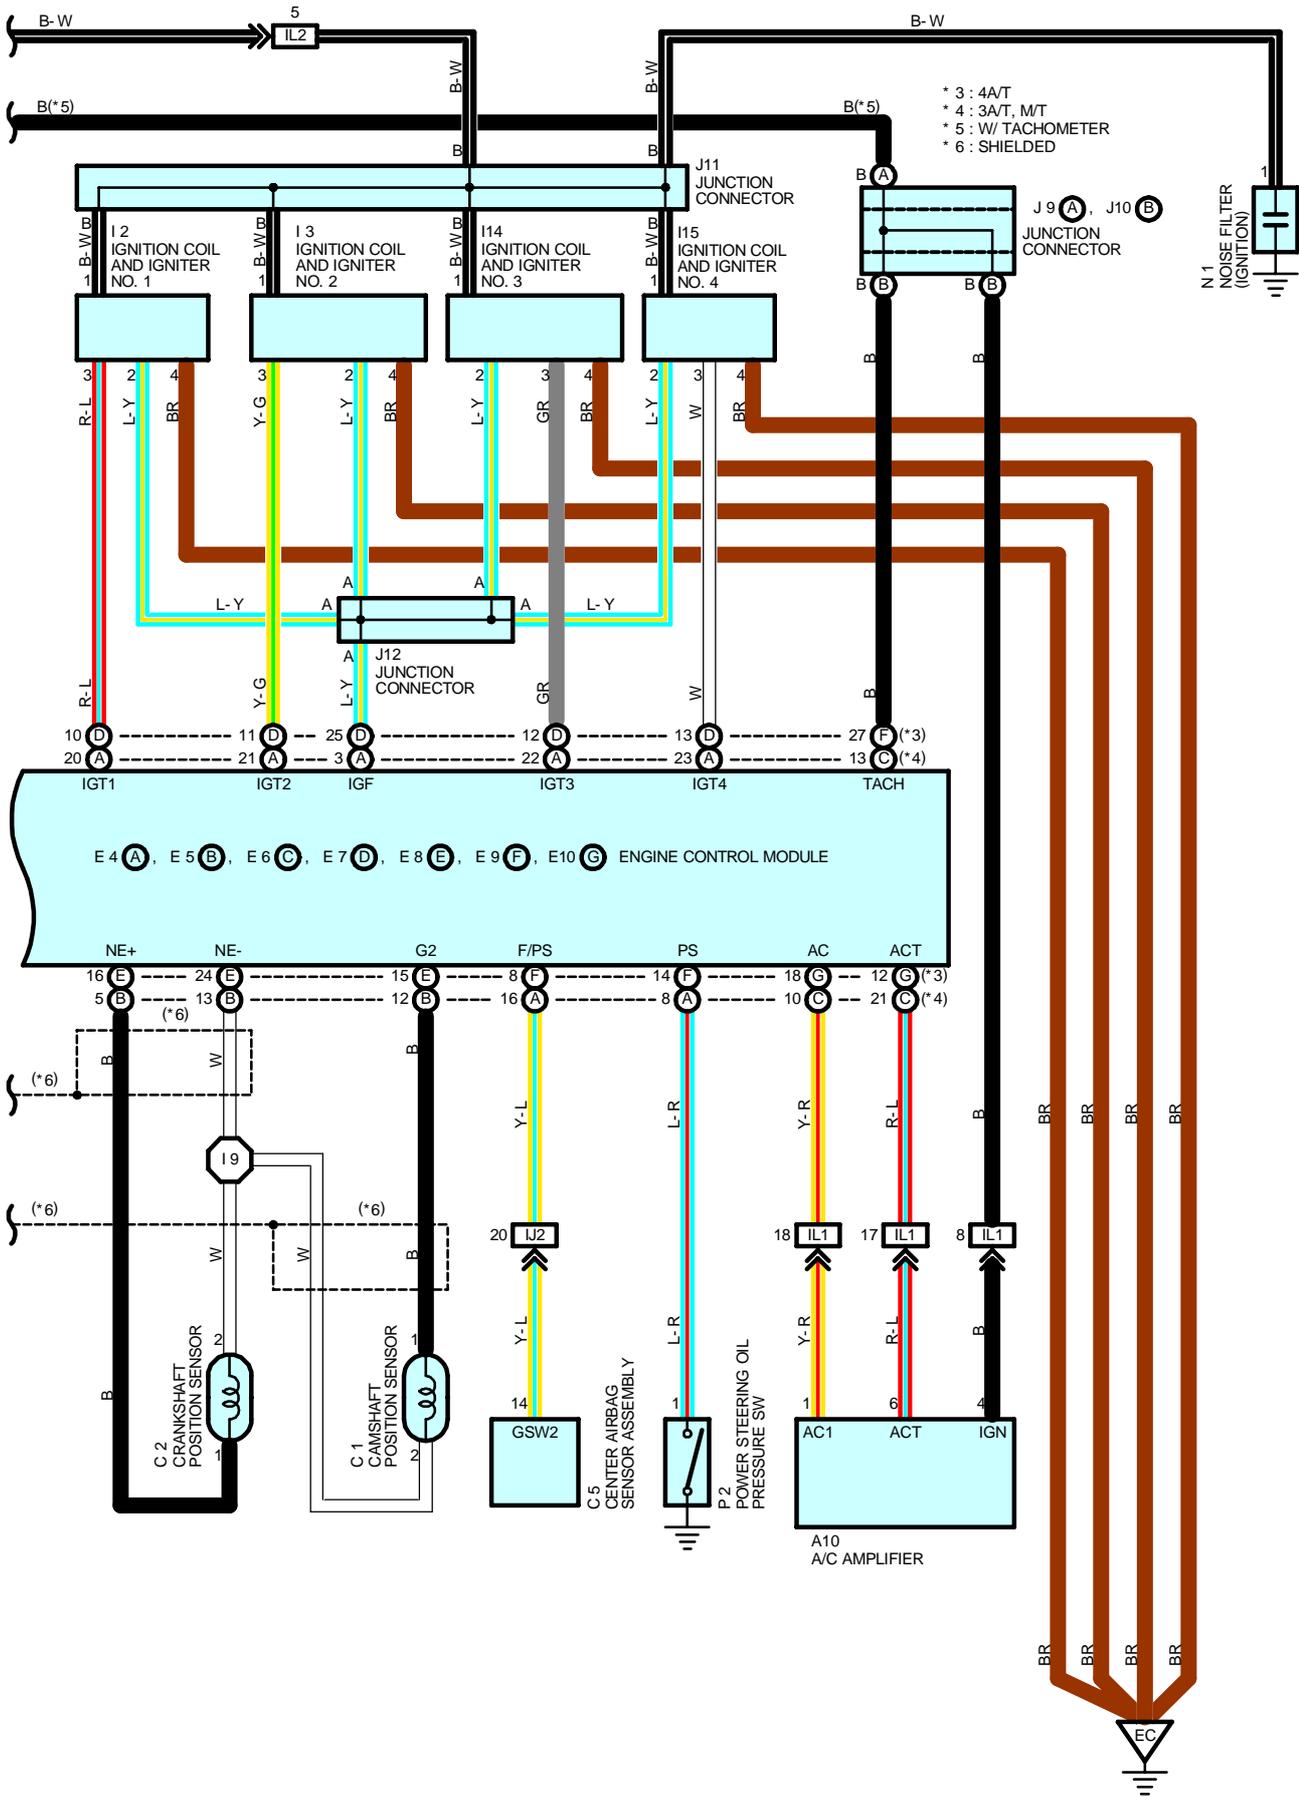

SYSTEM OUTLINE

The engine control system utilizes a microcomputer and maintains overall control of the engine, etc. An outline of engine control is given here.

1. INPUT SIGNALS

- (1) Engine coolant temp. signal system
The engine coolant temp. sensor detects the engine coolant temp. and has a built-in thermistor with a resistance which varies according to the engine coolant temp. Thus the engine coolant temp. is input as a control signal to TERMINAL THW of the engine control module.
- (2) Intake air temp. signal system
The intake air temp. sensor is installed in the mass air flow meter and detects the intake air temp., which is input as a control signal to TERMINAL THA of the engine control module.
- (3) Power steering oil pressure signal system
Power steering oil pressure is detected by the power steering oil pressure SW and is input as a control signal to TERMINAL PS of the engine control module.
- (4) RPM signal system
Camshaft position and crankshaft position are detected by the camshaft position sensor and crankshaft position sensor. Camshaft position is input as a control signal to TERMINAL G2 of the engine control module, and engine RPM is input into TERMINAL NE+.
- (5) Throttle signal system
The throttle position sensor detects the throttle valve opening angle, which is input as a control signal to TERMINAL VTA of the engine control module.
- (6) Vehicle speed signal system
The vehicle speed is detected by the vehicle speed sensor installed in the transaxle and the signal is input to TERMINAL SPD of the engine control module via the comb. meter.
- (7) NSW signal system (A/T)
The Park/Neutral position SW detects whether the shift position is in neutral or not, and inputs a control signal to TERMINAL NSW of the engine control module.
- (8) A/C SW signal system
The operating voltage of the A/C amplifier is detected and is input as a control signal to TERMINAL AC of the engine control module.
- (9) Battery signal system
Voltage is constantly applied to TERMINAL BATT of the engine control module. When the ignition SW is turned to on, voltage for engine control module operation is applied via the EFI or F-HTR relay to TERMINAL +B of the engine control module.
- (10) Intake air volume signal system
Intake air volume is detected by the mass air flow meter, and is input as a control signal to TERMINAL VG of the engine control module.
- (11) STA signal system
To confirm that the engine is cranking, the voltage applied to the starter motor during cranking is detected and is input as a control signal to TERMINAL STA of the engine control module.
- (12) Oxygen sensor signal system
The oxygen density in the exhaust gases is detected and is input as a control signal into TERMINALS OX1A and OX1B of the engine control module. To maintain stable detection performance by the oxygen sensor, a heater is used for warming the sensor. The heater is also controlled by the engine control module (HT1A and HT1B).
- (13) Engine knock signal system
Engine knocking is detected by the knock sensor and input as a control signal to TERMINAL KNK1 of the engine control module.
- (14) Electrical load signal system
When systems which cause a high electrical load such as the rear window defogger, taillight are turned on, a signal is input to TERMINALS ELS and ELS2 as a control signal.
- (15) Vapor pressure signal system
Vapor pressure is detected by the vapor pressure sensor and is input as a control signal to TERMINAL PTNK of the engine control module.

2. CONTROL SYSTEM

* SFI system

The SFI system monitors the engine conditions through the signals each sensor (Input signals 1, 4, 5, 10, 12)) input to the engine control module. Based on this data and the program memorized in the engine control module, the most appropriate fuel injection timing is decided and current is output to TERMINALS #10, #20, #30 and #40 of the engine control module, operating the injectors (to inject fuel). This is the system which finely controls the fuel injection in response to the driving conditions, through the engine control module.

* ESA system

The ESA system monitors the engine conditions using the signals (Input signals (1, 4, 5, 10, 13)) input to the engine control module from each sensor. Based on this data and the program memorized in the engine control module, the most appropriate ignition timing is decided and current is output to TERMINALS IGT1, IGT2, IGT3 and IGT4 of the engine control module. This output controls the ignition coil and igniter No. 1 , No. 2 , No. 3 and No. 4 to produce the most appropriate ignition timing for the driving conditions.

* IAC system

The IAC system (Rotary solenoid type) increases the RPM and provides idle stability for fast idle-up when the engine is cold, and when the idle speed has dropped due to electrical load and so on. The engine control module evaluates the signals from each sensor, and outputs current to TERMINAL RSO to control the idle air control valve.

* A/C cut control system

When the vehicle suddenly accelerates from low engine speed, this system cuts off the air conditioning operation for a fixed period of time in response to the vehicle speed, throttle valve opening angle and intake manifold pressure in order to maintain acceleration performance.

The engine control module receives (each signal), and outputs signals to TERMINAL ACT.

* Knock control system

Knock control system controls the gate based on the engine rotation speed and detects knocking by the peak value of the knock sensor output during the gate open period, and then controls it to the most suitable ignition timing in proportion to the driving condition.

* Evapopurge control system

This system leads the vapor stuck to the canister to the surge tank in order not to agitate the air fuel by adjusting the fuel injection volume.

The signal at this time will be output from TERMINAL EVP1 of the engine control module to VSV (ORVR).

3. DIAGNOSIS SYSTEM

With the diagnosis system, when there is a malfunctioning in the engine control module signal system, the malfunction system is recorded in the memory. The malfunctioning system can be found by reading the display (Code) of the malfunction indicator lamp.

4. FAIL-SAFE SYSTEM

When a malfunction occurs in any system, if there is a possibility of engine trouble being caused by continued control based on the signals from that system, the fail-safe system either controls the system by using the data (Standard values) recorded in the engine control module memory or else stops the engine.

SERVICE HINTS

C/OPN RELAY

5-3 : Closed with the starter running and the engine running

EFI or F-HTR RELAY

5-3 : Closed with the ignition SW at **ON** or **ST** position

E2 ENGINE COOLANT TEMP. SENSOR

1-2 : Approx. **14.96** k Ω (**-20** °C, **-4** °F)
Approx. **5.65** k Ω (**0** °C, **32** °F)
Approx. **2.44** k Ω (**20** °C, **68** °F)
Approx. **0.3143** k Ω (**80** °C, **176** °F)

E4 (A), E5 (B), E6 (C), E7 (D), E8 (E), E9 (F), E10 (G) ENGINE CONTROL MODULE

Voltage at engine control module wiring connectors

+B-E1 : **9- 14** volts (Ignition SW at **ON** position)

VC-E1 : **4.5- 5.5** volts (Ignition SW at **ON** position)

VTA-E1 : **0.3- 0.8** volts (Ignition SW on and throttle valve fully closed)

: **3.2- 4.9** volts (Ignition SW on and throttle valve fully open)

EVG-E1 : **3.3- 3.9** volts (Ignition SW at **ON** position)

THA-E1 : **0.5- 3.4** volts (Engine idling and intake air temp. **0- 80** °C, **32- 176** °F)

THW-E1 : **0.2- 1.0** volts (Engine idling and engine coolant temp. **60- 120** °C, **140- 248** °F)

STA-E1 : **6- 14** volts (Engine cranking)

IGT1, IGT2, IGT3, IGT4-E1 : Pulse generation (Engine idling)

IGF-E1 : Pulse generation (Engine idling)

FC-E1 : **9- 14** volts (Ignition SW on and engine stopping)

0- 3 volts (Engine idling)

W-E1 : **9- 14** volts (Engine idling and warning light off)

AC-E1 : **9- 14** volts (Ignition SW on and A/C SW off)

ACT-E1 : **4.5- 5.5** volts (Ignition SW on and A/C SW on)

SPD-E1 : Pulse generation (Driving approx. **20** km/h)

ELS2-E1 : **7.5- 14** volts (Ignition SW on and taillight on)

ELS-E1 : **7.5- 14** volts (Ignition SW on and rear window defogger on)

NSW-E1 : **0- 3** volts (Engine cranking)

#10, #20, #30, #40-E1 : Pulse generation (Engine idling)

NE+-NE- : Pulse generation (Engine idling)

RSO-E1 : Pulse generation (Engine idling)

G2-NE- : Pulse generation (Engine idling)

TBP-E1 : **9.0- 14.0** volts (Ignition SW on and disconnect the quick connector from the vapor pressure sensor)

PTNK-E1 : **3.0- 3.6** volts (Ignition SW at **ON** position)

: **1.3- 2.1** volts (Ignition SW on and apply vacuum **2.0** kpa (**15.0** mm hg, **0.6** in. hg))

OX1A, OX1B-E1 : Pulse generation (Maintain engine speed at **2500** rpm for two minutes after warming up.)

HT1A, HT1B-E1 : **9.0- 14.0** volts (Ignition SW at **ON** position)

0- 3.0 volts (Engine idling)

KNK1-E1 : Pulse generation (Engine idling)

EVP1-E1 : **9.0- 14.0** volts (Ignition SW at **ON** position)

TACH-E1 : Pulse generation (Engine idling)

ENGINE CONTROL

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A10	38	E9	F 38	J9	A 39
C1	36	E10	G 38	J10	B 39
C2	36	F7	40	J11	39
C5	38	H3	37	J12	39
C10	38	H6	38	J20	39
C12	B 38	I1	37	K1	37
C13	C 38	I2	37	M5	37
C14	D 38	I3	37	N1	39
C19	38	I4	37	P1	37
C20	36	I5	37	P2	37
D1	36	I6	37	T2	37
D2	38	I7	37	V1	37
E2	36	I10	39	V2	37
E4	A 38	I11	A 39	V3	41
E5	B 38	I14	37	V4	41
E6	C 38	I15	37	V5	37
E7	D 38	J6	39		
E8	E 38	J8	39		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	29	Driver Side R/B (Left Kick Panel)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	22	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IB		
IC	22	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
IE	23	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IJ	22	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1C	25	Cowl Wire and Driver Side J/B (Left Kick Panel)
1E	24	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1F	24	Floor Wire and Driver Side J/B (Left Kick Panel)
2B	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C	27	Engine Wire and Engine Room J/B (Engine Compartment Left)
2D		
2E		
2F	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2I		
3B	28	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
3C		
3D		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42	Engine No.4 Wire and Engine Wire (Inside of the Intake Manifold RH)
IC1	44	Floor Wire and Cowl Wire (Near the Driver Side J/B)
IG1	44	Floor Wire and Instrument Panel Wire (Left Kick Panel)
IJ1	46	Engine Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IJ2		
IK1	46	Instrument Panel Wire and Cowl Wire (Instrument Panel Brace RH)
IL1	46	Engine Wire and Cowl Wire (Instrument Panel Brace RH)
IL2		
BC1	48	Fuel Control Sub Wire and Floor Wire (Rear Wheel House LH)

 : GROUND POINTS

Code	See Page	Ground Points Location
EB	42	Front Side of the Left Fender
EC	42	Cylinder Head
ID	44	Left Kick Panel
IE	44	Instrument Panel Brace LH
IG	44	Instrument Panel Brace RH
BI	48	Under the Left Quarter Pillar

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	42	Engine Room Main Wire	I9	46	Engine Wire
I8	46	Engine Wire			